

Ground fixing guide





Accord	5
Accord Tubular	41
Horizon Blade	58

INSTALLATION METHODS





Inox allen screw M10x70		
Code	EB912-1070	
Expansion plug		
Code	EB01M-1040	





Concrete Screw Ø8-100			
Code	EBM-08100G		





Concrete Screw Ø10-100 EBM10-100 Code

4





Code

REQUIRED TOOLS











EBM-75112G





Fixing Methods with Circular Post, such as in F50-Accord




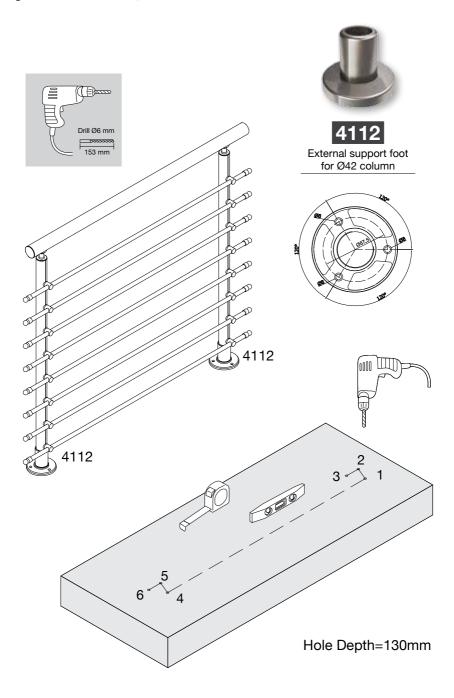


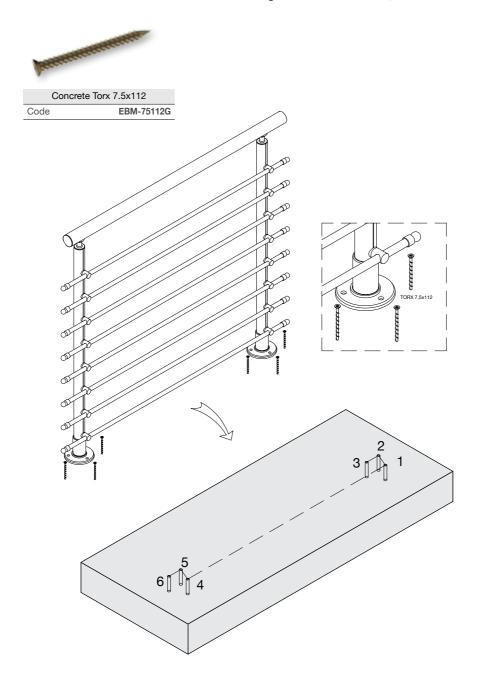

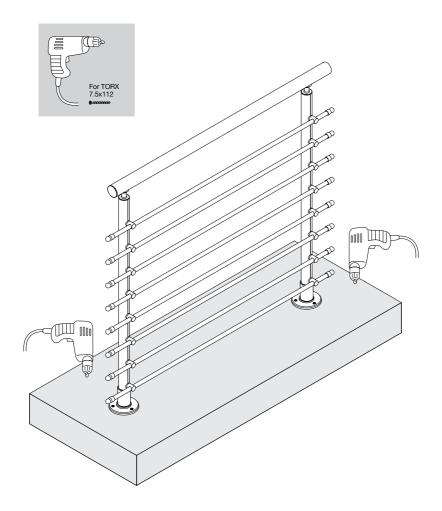


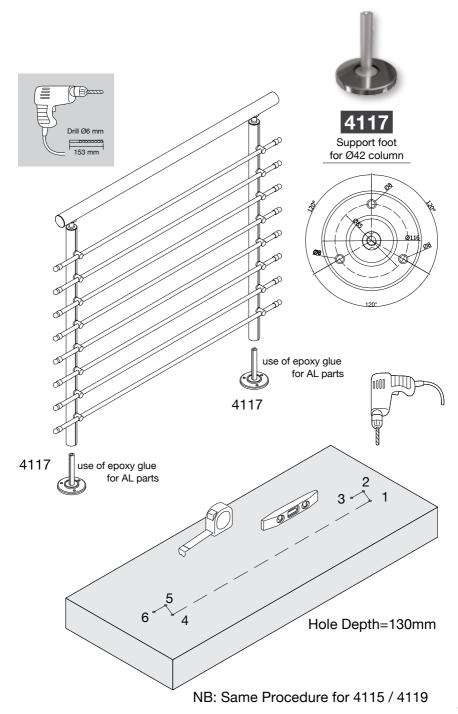


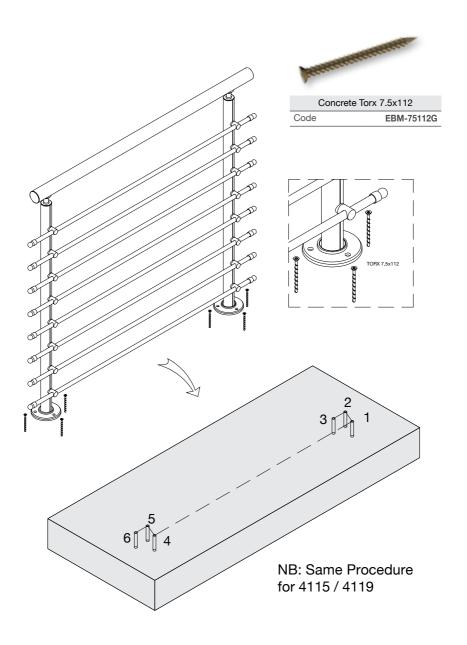


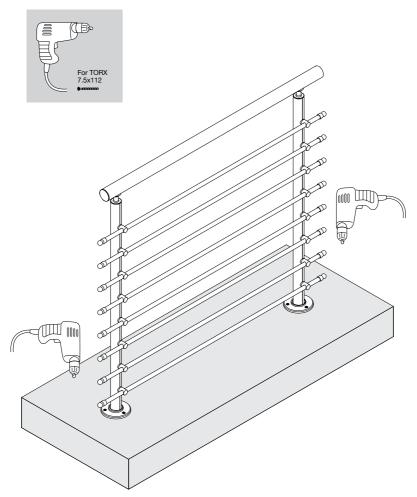



NB: Same Procedure for 4115 / 4119

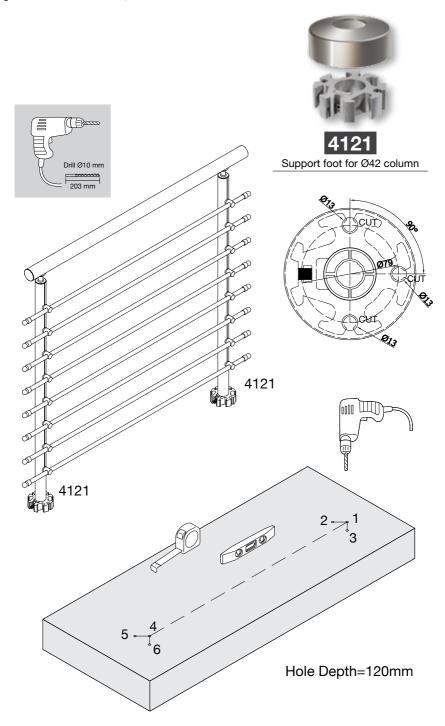


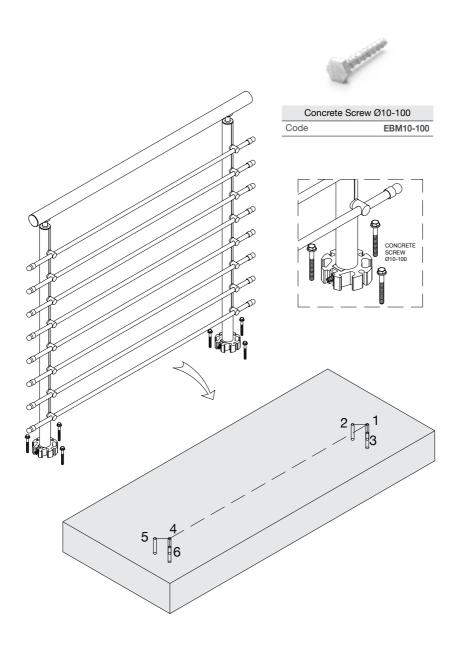


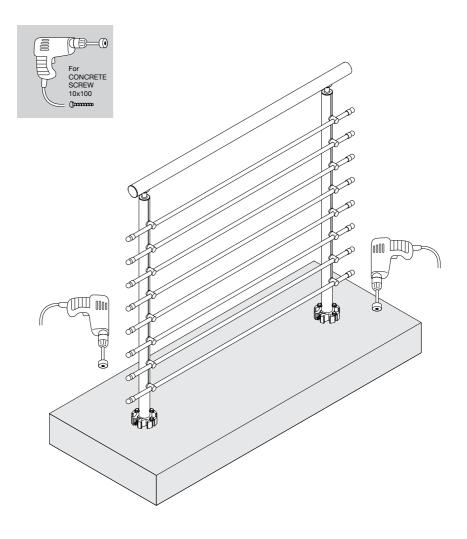


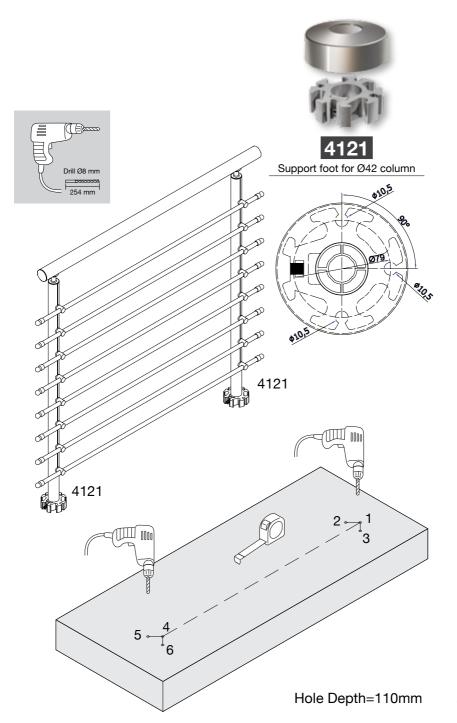


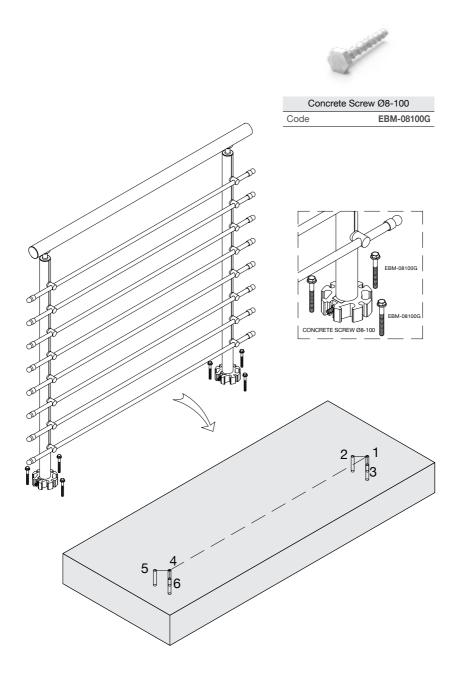


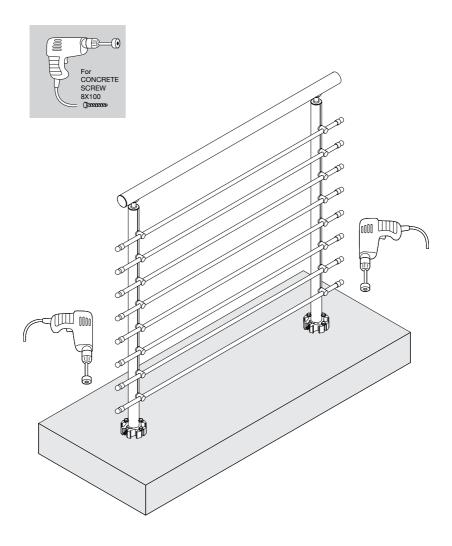


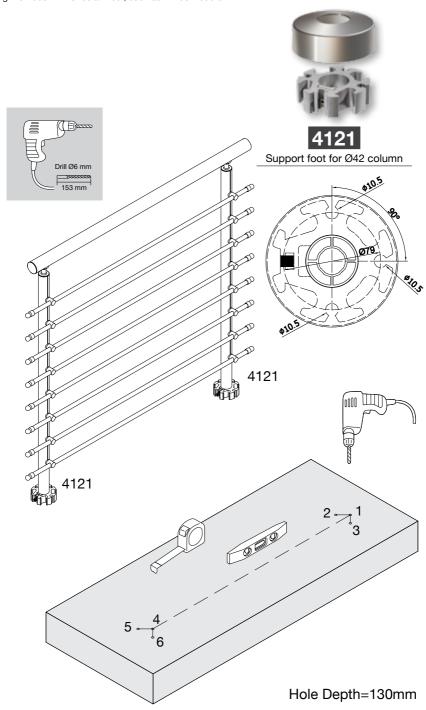


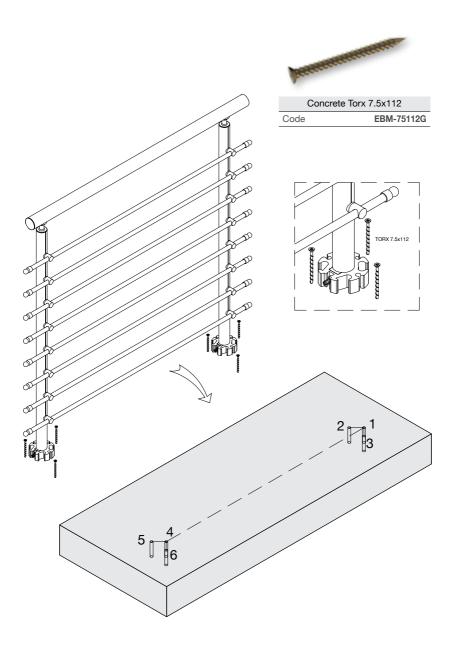


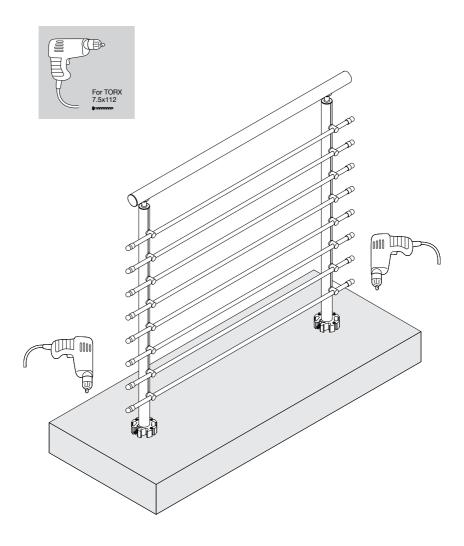


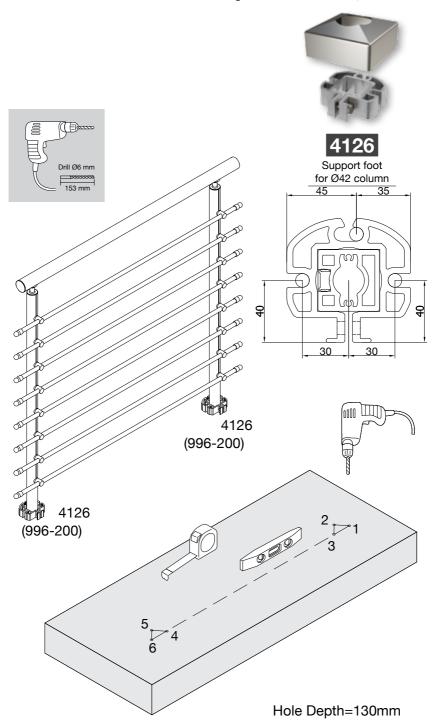


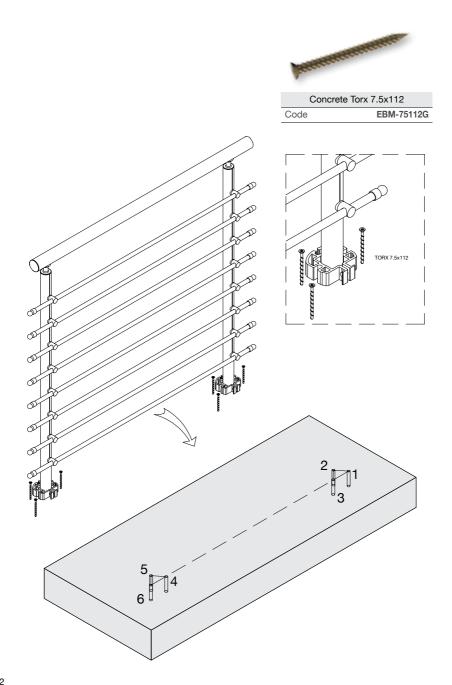


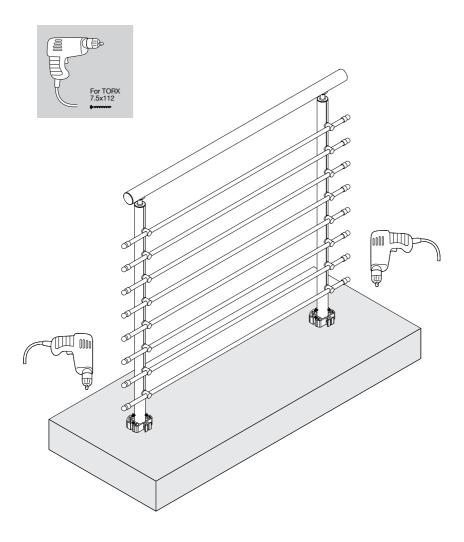


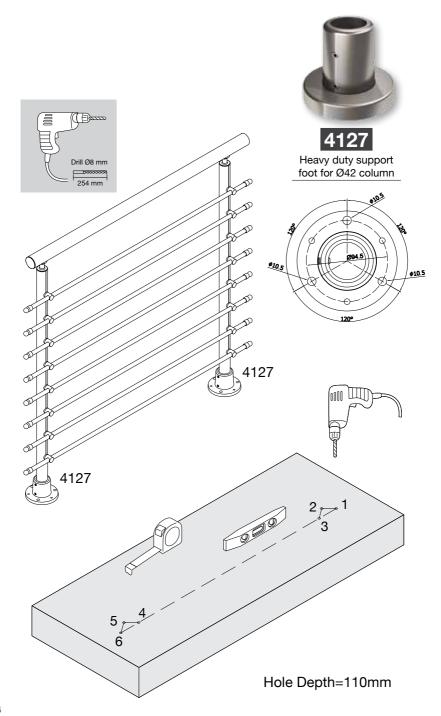


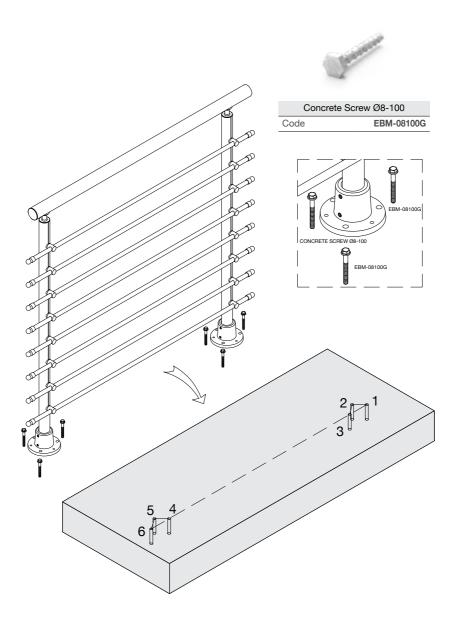


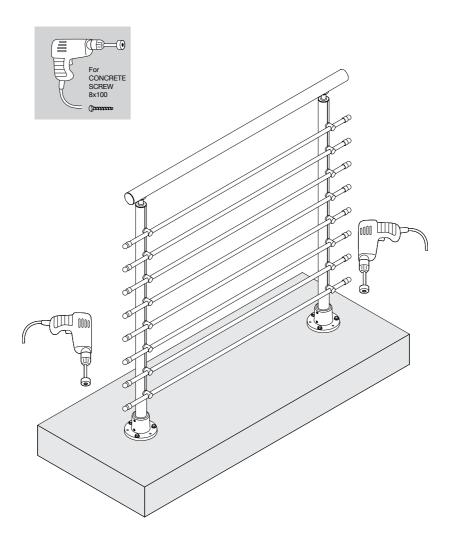


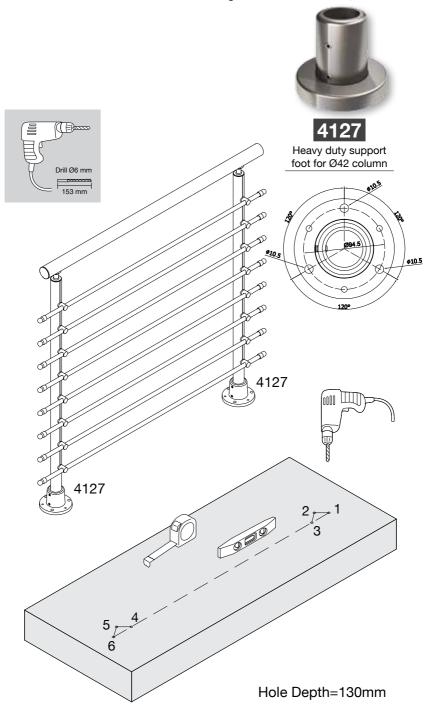


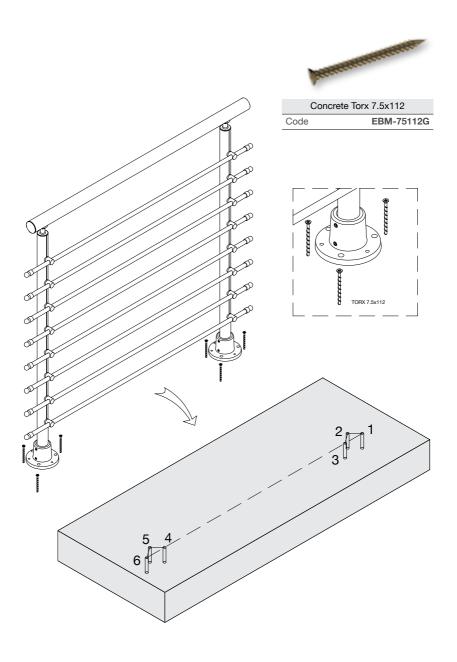


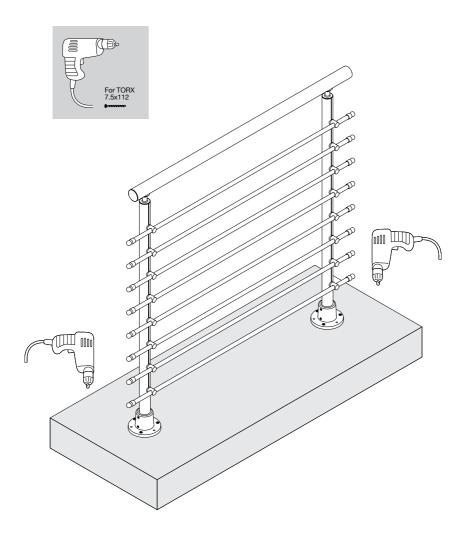


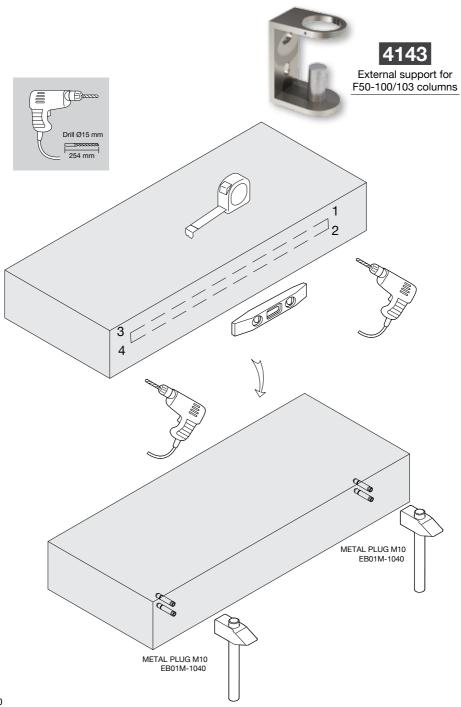


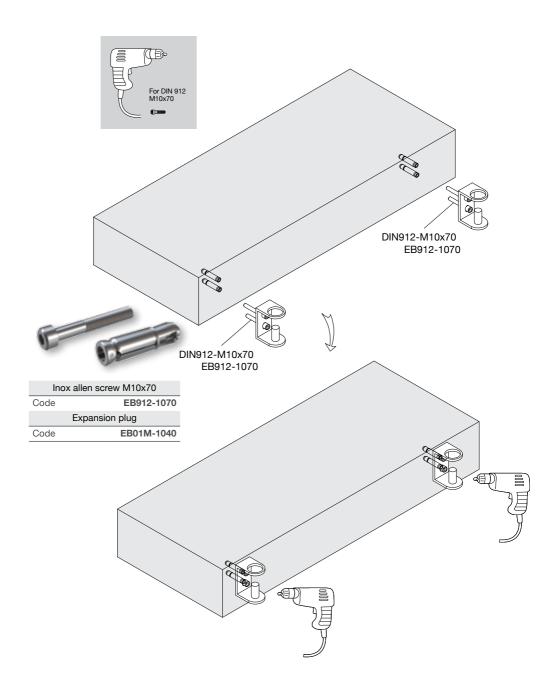


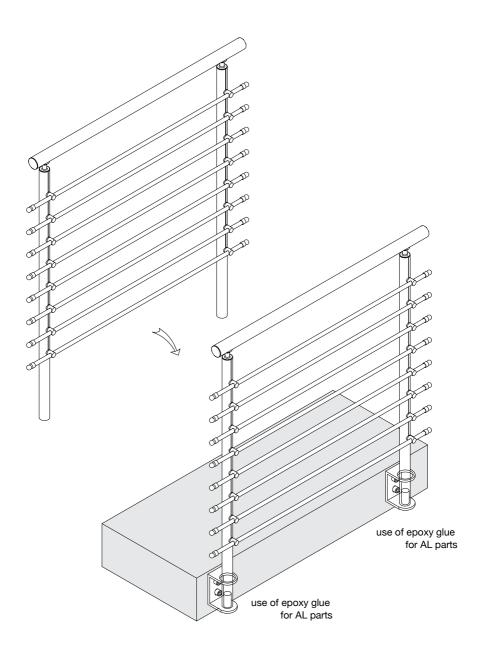


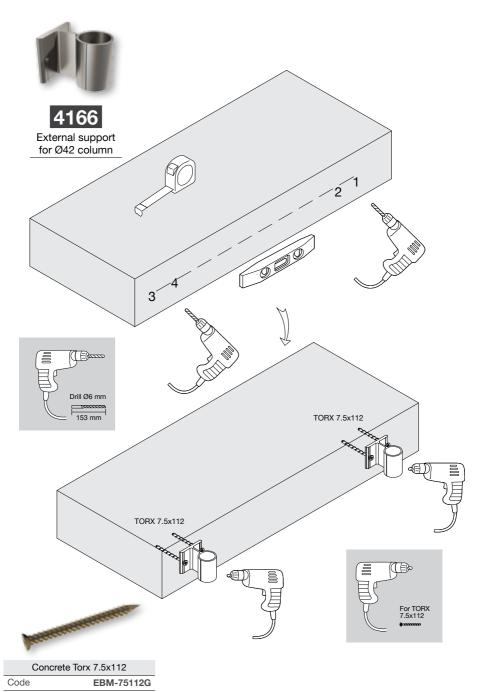


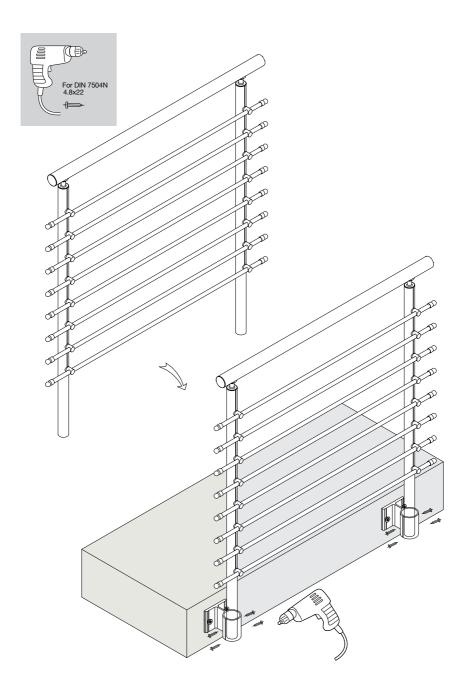


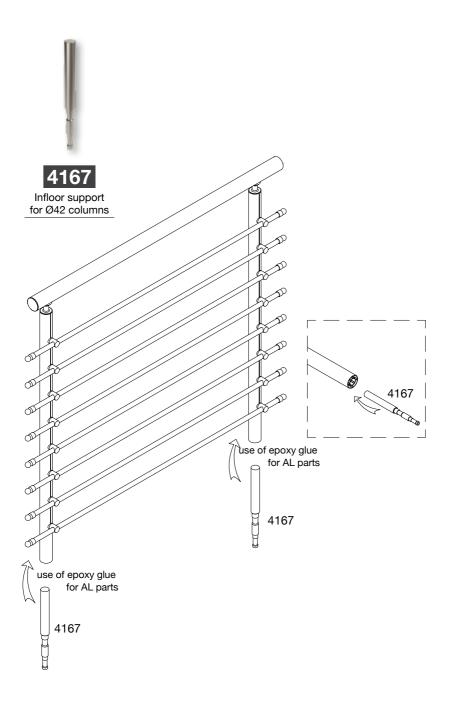


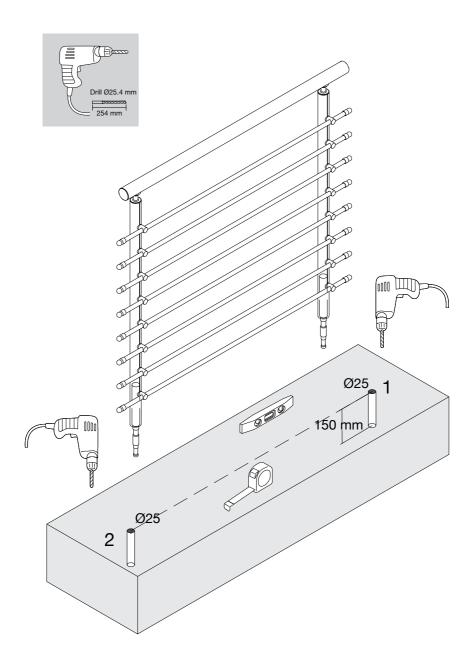

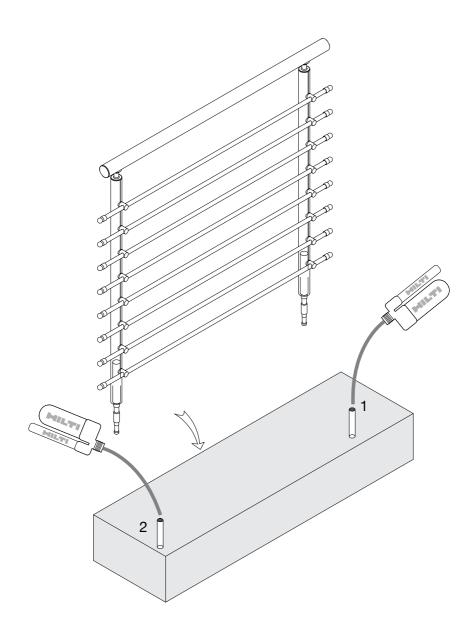

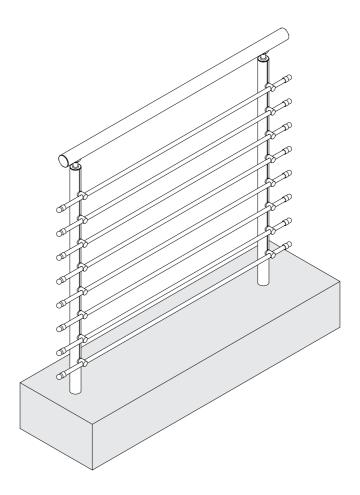

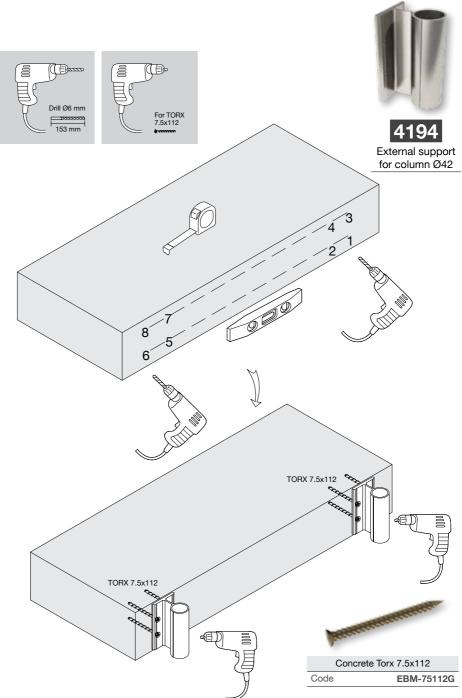


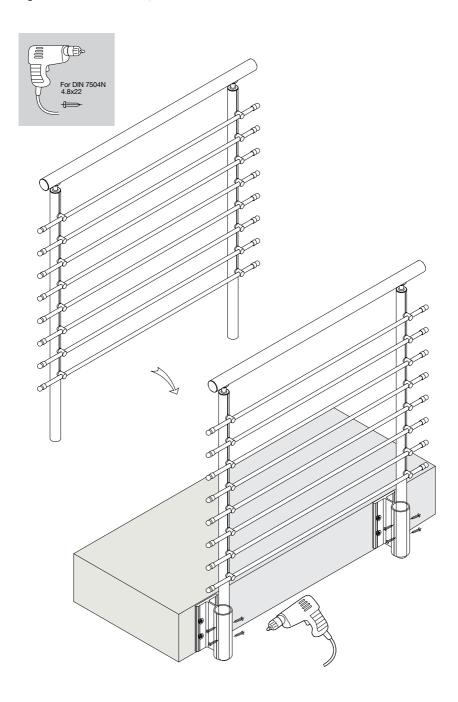






Fixing Methods with Rectangular Post, such as in F50-Accord Tubular




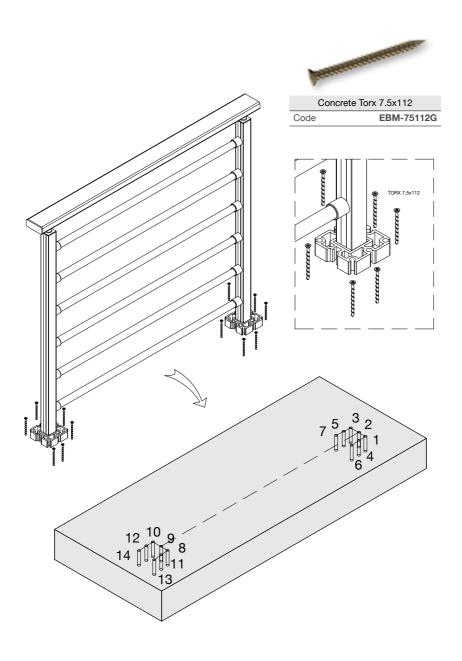


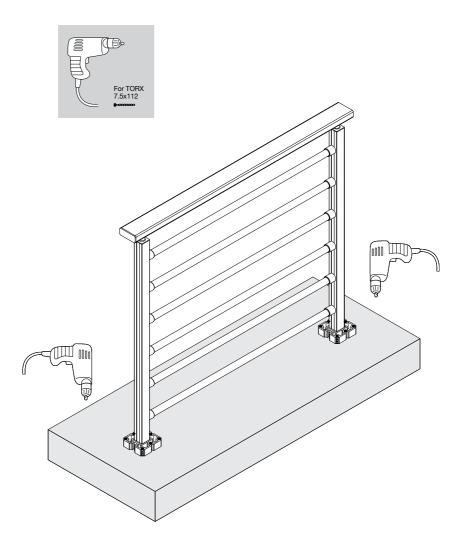


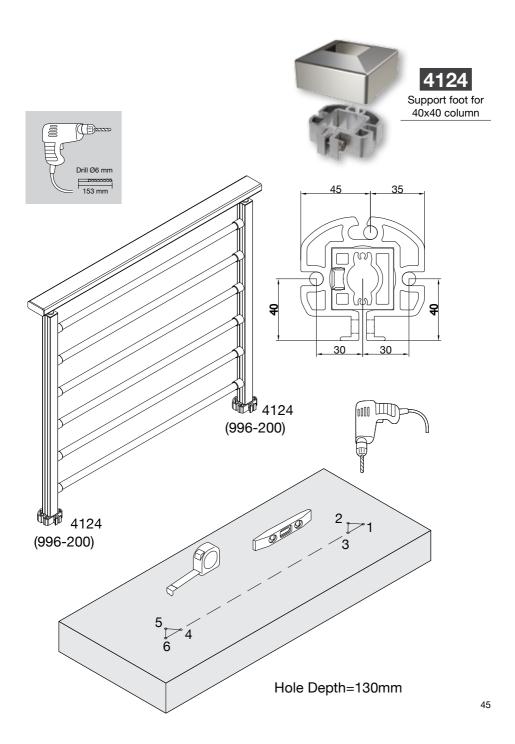


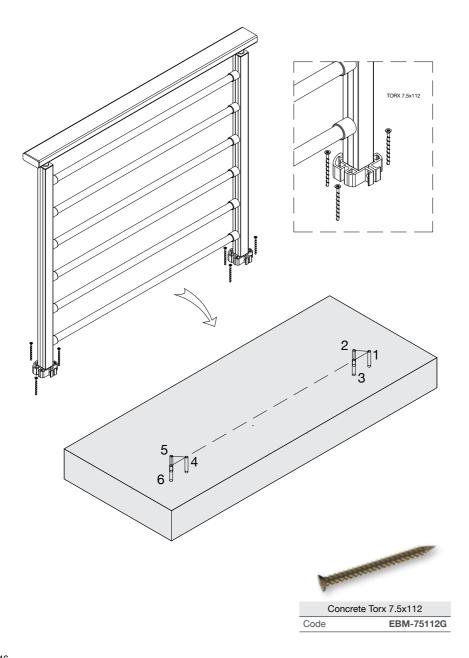


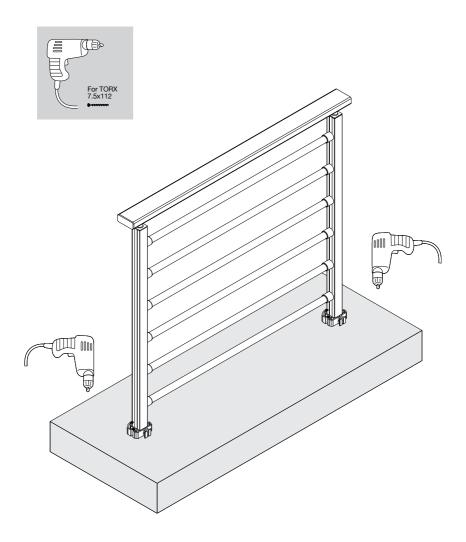


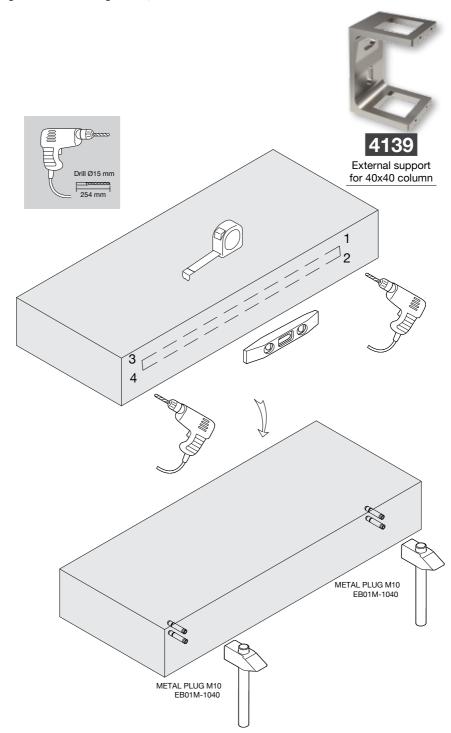


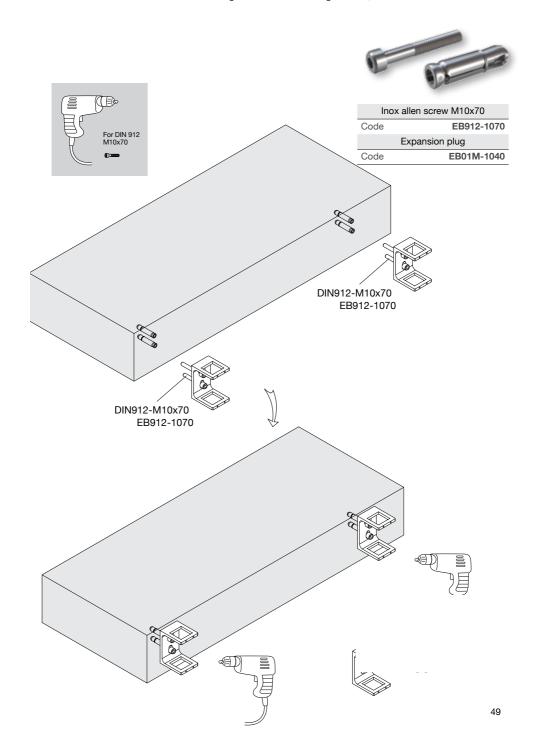


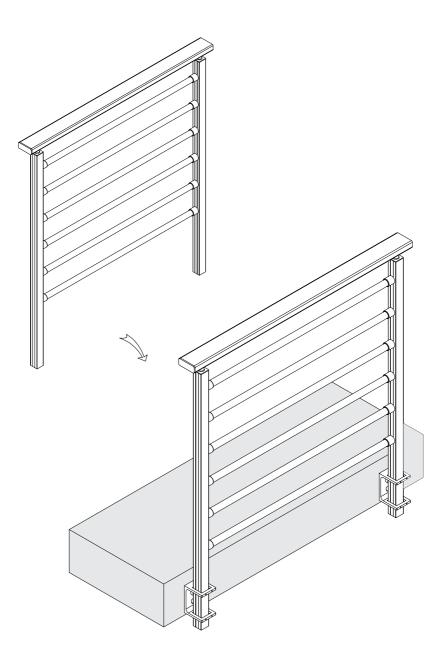


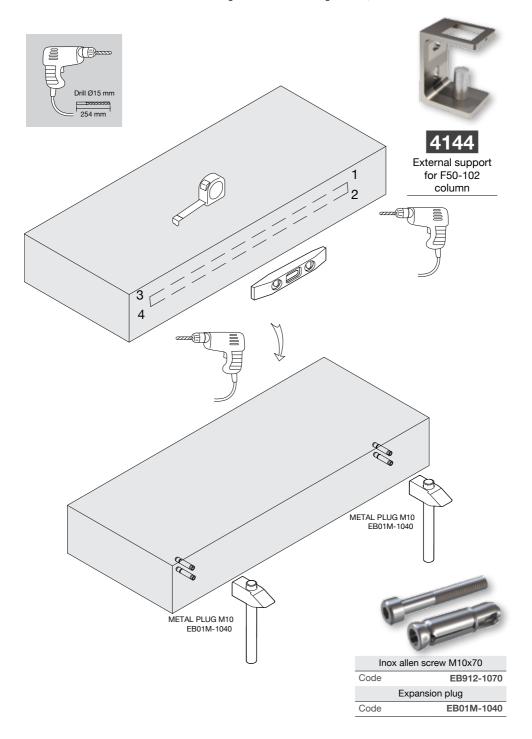


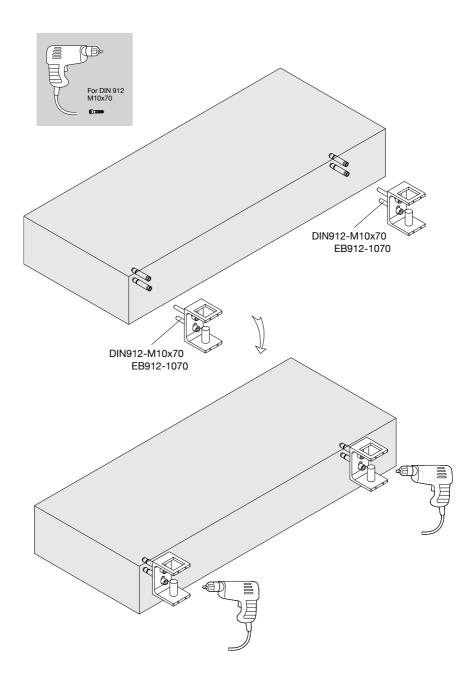


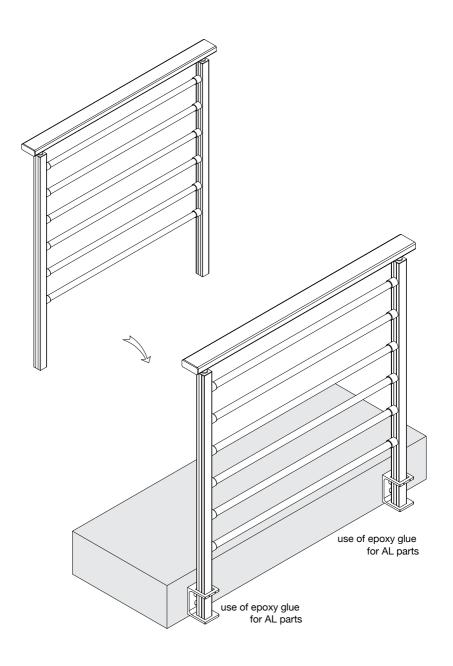

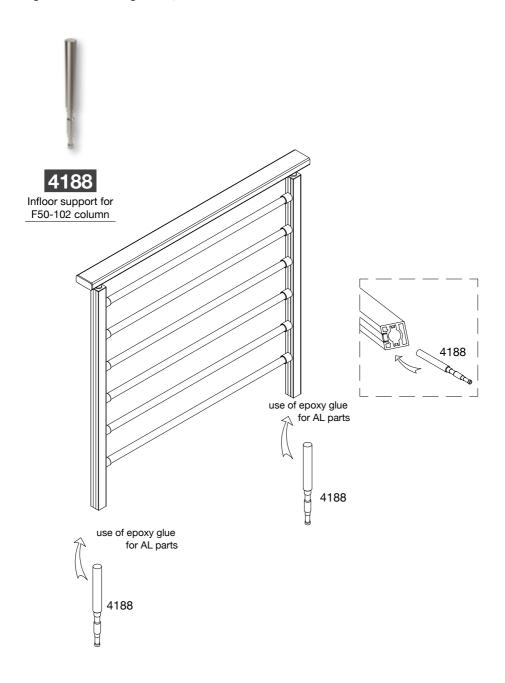

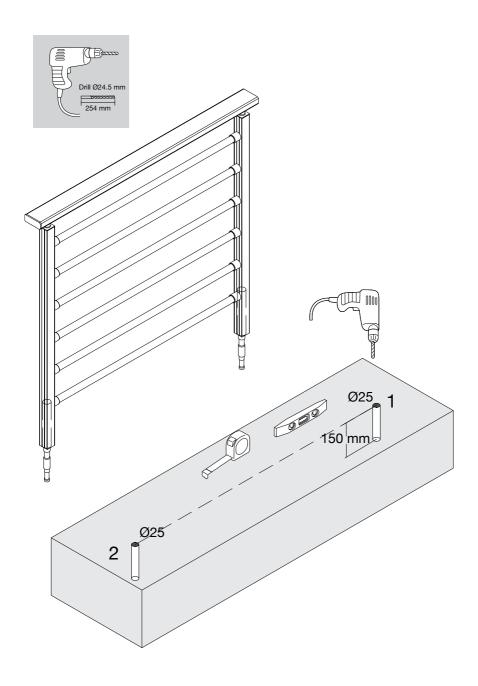

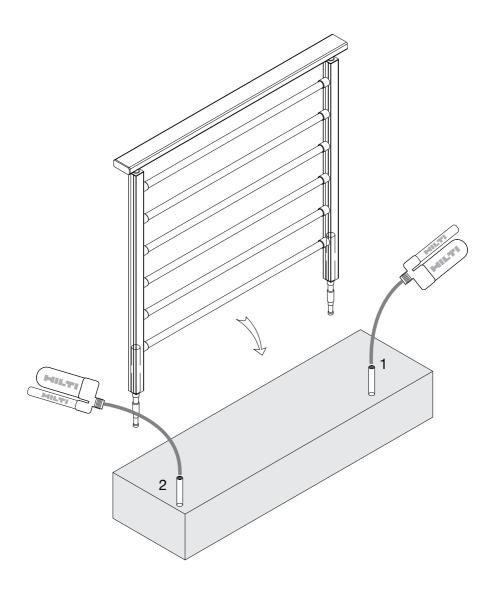

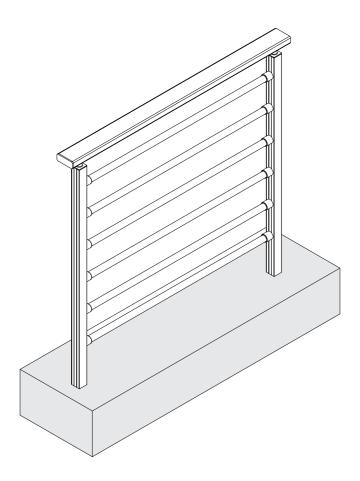



Horizon Blade



